EARTH TESTERS

MODEL 4102A



| | 4102A/4102A-H | | | |
|------------------------------|---|--------------------|------------|--|
| Earth resistance measurement | × 1ΩRange | × 10Ω | × 100Ω | |
| Measuring range | 0 - 12 Ω | 0 - 120 Ω | 0 - 1200 Ω | |
| Accuracy | ±3% of full scale | | | |
| Earth voltage measurement | | | | |
| Measuring range | 0 - 30 V AC (50,60Hz) | | | |
| Accuracy | ±3% of full scale | | | |
| Overload protection | ection Earth resistance : 276V AC/DC (10 seconds) Earth voltage : 276V AC/DC (10 seconds) | | | |
| | | | | |
| Applicable Standards | IEC 61010-1 CAT Ⅲ300 V Pollution degree 2 | | | |
| | IEC 61010-2-030, IEC 61557-1, -5, IEC 60529 IP54 | | | |
| Power source | $R6(AA)(1.5V) \times 6$ | | | |
| Dimensions | $105(L) \times 158(W) \times 70(H)$ mm (including case lid) | | | |
| Weight | Approx. 600g (including batteries and case lid) | | | |
| Accessories | 7095A(Earth resistance test leads [red-20m, yellow-10m, green-5m/1set]) | | | |
| | 7127A(Simplified measurement probe), | | | |
| | 8032(Auxiliary earth spikes[2 spikes/1set]), 9121(shoulder strap), | | | |
| | R6(AA) × 6, Instruction manual Carrying case: 9084[Soft]: 9164[Hard] | | | |
| | | | | |
| Optional | 7100A(Precision measurement Cord set), 8259(Adapter for measurement terminal) | | | |
| | 8259(Adapter for mea | surement terminal) | | |

MODEL 4102A Soft case model MODEL 4102A-H Hard case model

KEW 4105A



- In addition to the facility for precision measurement, test leads for simplified two wire measuring system also supplied as standard accessories.
- (unit can be hung from the neck for simplified measurement)
- The latest circuit design permits the instrument to operate with the minimum of influence from earth voltage and earth resistance of auxiliary earth spikes.
- Dust and drip proof. (designed to IEC 60529 IP54)
- $\bullet\;$ Earth resistance value can be read directly from the scale.
- Designed to meet IEC 61010-1 safety standard.
- Capable of measuring earth voltage.
- Small and lightweight. Shock resistant new case material.
- 2mA measuring current permits earth resistance tests without tripping earth leakage current breakers in the circuit under test.
- Lead wire connection to C and P terminals and proper auxiliary earth resistance can be checked by "OK" lamp. Lead wire connection to C and E terminals is good when "OK" lamp is illuminated. (4102A)

| | 4105A/4105A-H | | | |
|------------------------------|--|---------------|------------|--|
| Earth resistance measurement | 20Ω | 200Ω | 2000Ω | |
| Measuring range | 0.00 - 1999 Ω | | | |
| Display range | 0.00 - 19.99 Ω | 0.0 - 199.9 Ω | 0 - 1999 Ω | |
| Accuracy | $\pm 2\%$ rdg $\pm 0.1 \Omega$ | ±2%rdg±3dgt | | |
| Earth voltage measurement | | | | |
| Measuring range | 0 - 200 V AC (50,60Hz) | | | |
| Display range | 0.0 - 199.9 V | | | |
| Accuracy | ±1%rdg±4dgt | | | |
| Overload protection | Earth resistance : 280V AC (10 seconds) Earth voltage : 300V AC (1 minute) | | | |
| Applicable Standards | IEC 61010-1 CAT Ⅲ 300 V Pollution degree 2 IEC 61010-2-030, IEC 61557-1, -5, IEC 60529 IP54 | | | |
| Power source | $R6(AA)(1.5V) \times 6$ | | | |
| Dimensions | $105(L) \times 158(W) \times 70(H)$ mm (including case lid) | | | |
| Weight | Approx. 550g (including batteries and case lid) | | | |
| Accessories | 7095A(Earth resistance test leads [red-20m, yellow-10m, green-5m/1set]) 7127A(Simplified measurement probe), 8032(Auxiliary earth spikes[2 spikes/1set]), 9121(shoulder strap), R6(AA) × 6, Instruction manual Carrying case : 9084 [Soft]: 9165[Hard] | | | |
| Optional | 7100A(Precision measurement Cord set), 8259(Adapter for measurement terminal) | | | |

кеw 4105A кеw 4105A-Н

Soft case model Hard case model








Hard case model

Optional Accessories

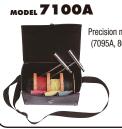

Precision measurement cord set (7095A, 8032, 8200-03, 9091)



MODEL 7095A
Test leads for earth resistance



MODEL 8032
Auxiliary earth spikes
[2 spikes/1set]



MODEL 8200-03 Cord reels[3 pcs]



MODEL 9091
Carrying case for cord reels