Your Specialists for electromagnetic Actuators and Sensors

Inductive transducer in round metal housing

Application

The inductive transducer is used for measuring of displacements. It can either be flange-mounted at a solenoid and at other measuring objects. The core which can be moved within the coils has to be connected to the measuring object with a threaded rod. The MSM transducers are characterized by high resolution, good linearity and long service life.

In conjunction with a control and a proportional solenoid the result is a complete displacement control system.

Function

The function of the inductive transducer bases on the principle of the differential transformer. The device has to be connected to AC voltage. The difference of the voltage induced in the secondary coils - under consideration of the phase position is a unit of measurement for the position of the core.

Construction characteristics

- Optimized temperature drift
- Suitable for dry and pressure-tight applications
- Pressure-tight tube, designed for 350 bar static pressure
- Mounting via fit at the tube
- Electrical connection and protection class when properly installed:
 - Connection via free lead ends with contacts and connector housing Protection class according to DIN VDE 0470/ DIN EN 60529 – IP 54
- Threaded rod for fastening the core with the measuring object
- Version according to ATEX on request



Fig. 1: A WX X 010 A01



A WX X



Technical data

		A WX X 007 A01	A WX X 010 A01
Measuring path	(mm)	± 4.5 / ± 7.5 mm	± 10
Supply voltage U _B (recommended)	(~ Vr ms)	3.54	3
Supply frequency	(kHz)	5	2.5
Sensitivity	$\left(\frac{mV}{mm}\right)$	60 ± 5 %	27 ± 5 %
Output voltage (effective value)	(~ Vr ms)	0 1.59	0 0.27
Input impedance (impedance of the primary bobbin)	(Ω)	≥ 380	≤ 160
Output impedance (impedance of the secondary bobbin)	(Ω)	≤ 1500	≤ 4 00
Linearity tolerance	(%)		± 1
Up to s = 4.5 mm	(%)	± 0.6	
Up to s = 7.5 mm	(%)	± 3	
Reference temperature range	(°C)	- 20 + 90°	- 20 + 90°
Temperature drift	(% / K)	0.015	0.007

Sensitivity for A WX X 007 A01

The sensitivity is the change of the output voltage ΔU , referring to the change of the measurement path Δs and the supply voltage $U_{_B}$

(indicated in
$$\left[\begin{array}{c} \frac{mV}{V \cdot mm} \end{array} \right]$$
).
Sens. = $\frac{\Delta U}{U_{B} \times \Delta s}$ = $\frac{U_{A1} - U_{A2}}{U_{B} \times (s_{1} - s_{2})}$

Tolerance of the linearity

The Tolerance of the linearity indicates the deviation in per cent of the output signal of the ideal straight line.

Dev. Lin =
$$\frac{IU_{actual} - U_{target}I}{U_{voltage stroke}} \times 100 \%$$

Temperature drift

The temperature drift indicates the deviation in per cent of the output signal per degree of temperature change (indicated in % / K)

Dev. Temp. =
$$\frac{IU_{\text{Temp}} - U_{20^{\circ}C}I}{U_{\text{Voltage stroke}} \times I \Delta T I} \times 100 \%$$

Sensitivity for A WX X 010 A01

The sensitivity is the change of the output voltage ΔU , referring to the change of the measurement path Δs .

(indicated in
$$\left[\begin{array}{c} \frac{mV}{mm} \end{array} \right]$$
).
Sens. = $\frac{\Delta U}{\Delta s}$ = $\frac{U_{A1} - U_{A2}}{s_1 - s_2}$

Output voltage for A WX X 010 A01

The output voltage U_A is calculated from the secondary voltages $(U_{sek1}; U_{sek2})$

Output signal
$$U_A = \frac{(U_{sek1} - U_{sek2})}{(U_{sek1} + U_{sek2})}$$

By edition of the present list, all former unit lists lose their validity especially. Illustrations without guarantee - modifications and supply availability reserved



Dimensional drawing



















Fig. 6: Connection diagram A WX X 010 A01

Information and remarks concerning European directives can be taken from the correspondent information sheet which is available under *Produktinfo.Magnet-Schultz.com*.

Note on the RoHS Directive

According to our current state of knowledge the devices pictured in this document do not contain any substances in concentration values or applications for which putting into circulation with products manufactured from them is prohibited in accordance to RoHS.

Please make sure that the described devices are suitable for your application. Supplementary information concerning its proper installation can be taken also from the A –Technical Explanation, the effective DIN VDE0580 as well as the relevant specifications.

This part list is a document for technically qualified personnel.

The present publication is for informational purposes only and shall not be construed as mandatory illustration of the products unless otherwise confirmed expressively.

Type code



A WX X 007 A01

Order example

Туре

Specials designs

Please do not hesitate to ask us for application-oriented problem solutions. In order to find rapidly a reliable solution we need complete details about your application conditions. The details should be specified as precisely as possible in accordance with the relevant \P -Technical Explanations.

If necessary, please request the support of our corresponding technical office.



for transducer A WX X 010 A01