

## Tinytag Plus Re-Ed OEM Voltage Input Logger (0-2.5/10/25V)

### TGPR-0700

**Issue 14**  
17th October 2014  
E&OE

A voltage input data logger that is supplied uncased so that it can be built into custom applications.



This logger can measure voltages up to 25V DC and can be connected to many industry standard devices, such as CO<sub>2</sub> sensors and current clamps, enabling the logging of a wide range of process parameters.


#### Popular Applications

- Battery condition monitoring
- Customised data logging:
  - CO<sub>2</sub>
  - Pressure
  - Flow Rate
  - Light
  - Power (with a current clamp)

#### Features

- Voltage input data logger
- 64,000 reading capacity
- User-programmable logging interval
- 2 user-programmable alarms
- Delayed start options
- 3 stop options
- User-replaceable battery

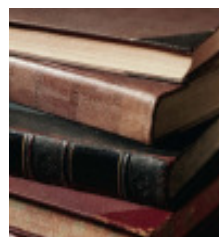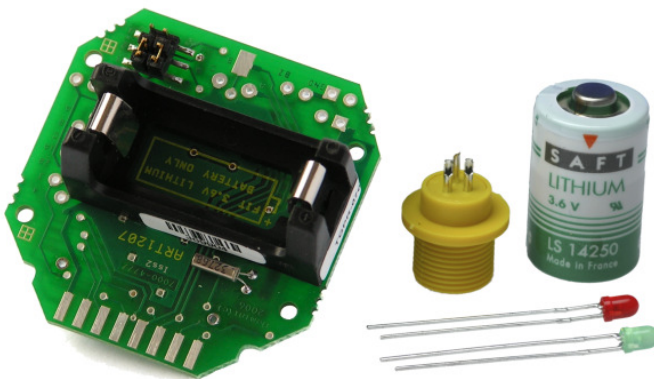


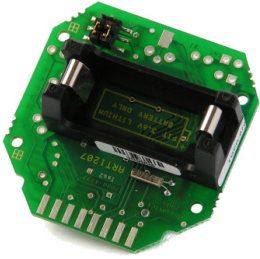

### Features

<b>Total Reading Capacity</b>	64,000 readings (current product); 16,000 readings (below SN 503205)
<b>Memory type</b>	Non Volatile
<b>Delayed Start</b>	Relative / Absolute (up to 45 days)
<b>Stop Options</b>	When full After n Readings Never (overwrite oldest data)
<b>Logging Interval</b>	1 sec to 10 days
<b>Offload</b>	While stopped or when logging in minutes mode
<b>Alarms</b>	2 fully programmable; latchable

### Connection Information

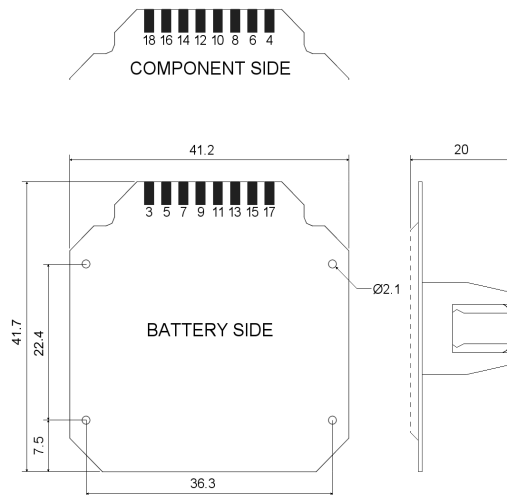

The PCB edge mates with a 0.1" IDC female edge connector, such as RS Part No. 471-317.


#### Battery Side

- 3: Battery +Ve (3.6V)
- 5: Green LED Anode
- 7: RS232 Logger Transmit (Tx)
- 9: RS232 Logger Receive (Rx)
- 11: Do Not Connect
- 13: Do Not Connect
- 15: Do Not Connect
- 17: Power and Signal GND (0V)

#### Component Side

- 4: Do Not Connect
- 6: Red LED Anode
- 8: Do Not Connect
- 10: Sense Line\*
- 12: Reference Line\*
- 14: Do Not Connect
- 16: Do Not Connect
- 18: Voltage Signal Input

#### Communication Socket (supplied) as viewed from behind.

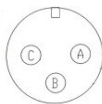

- A: RS232 Logger Receive (Rx)
- B: RS232 Logger Transmit (Tx)
- C: Power and Signal GND (0V)

\*See Notes.

### Physical Specification

**Operational Range\*** -40°C to +85°C (-40°F to +185°F)

\*The Operational Range indicates the physical limits to which the unit can be exposed.

### Reading Specification

#### 0 to 2.5V Range

**Maximum Input** 3.5V  
**Max. input current** ±1µA (typically ±0.4µA)  
**Resolution** 10mV  
**Accuracy** ±10mV ±0.5% reading

#### 0 to 10V Range

**Maximum Input** 14V  
**Input Impedance** 400kΩ  
**Resolution** 40mV  
**Accuracy** ±40mV ±1% reading

#### 0 to 25V Range

**Maximum Input** 35V  
**Input Impedance** 1MΩ  
**Resolution** 100mV  
**Accuracy** ±100mV ±1% reading

### Notes

**Battery Type** Tekcell SBAA02P,  
SAFT LS14250 or LST14250;

The logger will operate with other ½AA 3.6V Lithium (Li-SOCl<sub>2</sub>) batteries but performance cannot be guaranteed.

**Replacement Interval** Every two years

Before replacing the battery the data logger must be stopped.

Data stored on the logger will be retained after a battery is replaced.

Battery and 2 LEDs are supplied, but not fitted to the PCB.

The Reference line is an output from the logger that provides a 2.5V (100µA max) reference voltage for external application, if required.


The Sense Line is an output from the logger that changes state when a reading is taken.

This line goes from 0v to +3.5V, for approximately 50mS, whilst a reading is being taken (the line goes back to 0V when the reading cycle is complete).

The Sense Line has an impedance of 100KΩ.

The Reference and Sense Lines do not need to be connected for the data logger to record correctly.

Using the Re-Educator software, which is supplied on the Tinytag Explorer CD, or can be downloaded free of charge from our web site ([www.tinytag.info/downloads](http://www.tinytag.info/downloads)), the unit can be configured to display recorded data in the appropriate engineering units for the application it is being used in.

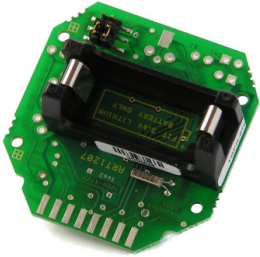


### Changing the Voltage Range

As supplied, the TGPR-0700 is set to record using the 2.5V reading range.

Changing the reading range to 10 or 25V is a two step process that requires the moving of jumper links on the unit and the selection of the correct reading range using Re-Educator software (which is supplied on the Tinytag Explorer CD, or can be downloaded free of charge from our web site ([www.tinytag.info/downloads](http://www.tinytag.info/downloads))).

#### Jumper Link Positions

Set the jumper links to select the required reading range as shown in the diagrams below:

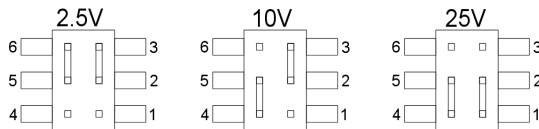

#### Re-Educator Software

Once the unit's jumper links have been set to the correct position, the correct reading range needs to be selected using the Re-Educator software.

- Connect to the data logger and select the appropriate tab for the reading range required, from the bottom left of the screen.
- Next check the **Preferred** menu option (this should grey-out) and then click on the **Write** button.
- On the "Write Information to Logger" screen that then appears, simply click **OK** with the **Write new algorithms** box checked.

When the write process is complete the data logger will be ready for use.

### Calibration

This unit is configured to meet Gemini's quoted specification during its manufacture.

We recommend that the calibration of this unit should be checked annually against a calibrated reference meter.

A certificate of calibration, traceable to a national standard, can be supplied for an additional charge either at the point of purchase, or if the unit is returned for a service calibration.

### Approvals

Gemini Data Loggers (UK) Ltd. operates a Business Management System which conforms to ISO 9001 and ISO 14001.



### Required and Related Products

To use this data logger you will require the following software:

SWCD-0040: Tinytag Explorer software

#### Further Related Products

CAB-0007-USB: Tinytag Ultra/Plus/View USB Download Cable

The SWCD-0040 software and CAB-0007-USB cable can be ordered together in a pack using the part number SWPK-7-USB.