



# Tinytag Plus Re-Ed OEM Millivolt Input Logger (0 to 200mV)

A millivolt input data logger that is supplied uncased so that it can be built into custom applications.

The TGPR-1000 can be used to record the output from a number of industry standard sensors.

Common applications include mains and power consumption monitoring.

# **TGPR-1000**

**Issue 11** 17th October 2014 E&OE

# **Popular Applications**

 Customised data logging: CO<sub>2</sub> Pressure Flow Rate

- Light
- Power (with a current clamp)



# Features

- Millivolt input data logger
- 64,000 reading capacity
- User-programmable logging interval
- 2 user-programmable alarms
- Delayed start options
- 3 stop options
- User-replaceable battery



www.tinytag.info

sales@tinytag.info



# Tinytag Plus Re-Ed OEM Millivolt Input Logger (0 to 200mV) TGPR-1000

Issue 11: 17th October 2014 (E&OE)




# **Features**

Total Reading Capacity	64,000 readings (current product); 16,000 readings (below SN 501182)
Memory type	Non Volatile
Delayed Start	Relative / Absolute
	(up to 45 days)
Stop Options	When full
	After n Readings
	Never (overwrite oldest data)
Logging Interval	1 sec to 10 days
Offload	While stopped or when
	logging in minutes
	mode
Alarms	2 fully programmable; latchable

### **Connection Information**



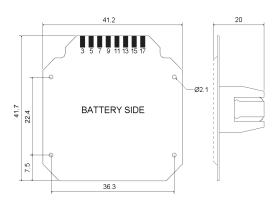

The PCB edge mates with a 0.1" IDC female edge connector, such as RS Part No. 471-317.

#### **Battery Side**

# **Component Side**

3: Battery +Ve (3.6V)	4: Do Not Connect
5: Green LED Anode	6: Red LED Anode
7: RS232 Logger Transmit (Tx)	8: Do Not Connect
9: RS232 Logger Receive (Rx)	10: Sense Line*
11: Do Not Connect	12: Reference Line

: Sense Line\* 2: Reference Line' 14: Do Not Connect 16: Do Not Connect

Communication Socket (supplied) as viewed from behind.

18: mV Signal Input

- 15: Do Not Connect 17: Power and Signal GND (0V)

13: Do Not Connect



A: RS232 Logger Receive (Rx) B: RS232 Logger Transmit (Tx) C: Power and Signal GND (0V)

#### \*See Notes

## Approvals

Gemini Data Loggers (UK) Ltd. operates a Business Management System which conforms to ISO 9001 and ISO 14001.

# **Physical Specification**

**Operational Range\*** 

-40 ℃ to +85 ℃ (-40 ℉ to +185 ℉)

\*The Operational Range indicates the physical limits to which the unit can be exposed

### Reading Specification

Range
Maximum Input
Input Impedance
Resolution
Accuracy

0 to 200mV DC 500mV 100kΩ 0.8mV ±1mV ±0.5% of reading

## Notes

Battery Type

Tekcell SBAA02P SAFT LS14250 or LST14250

The logger will operate with other 1/2AA 3.6V Lithium (Li-SOCI2) batteries, but performance cannot be guaranteed.

Replacement Interval Every two years

Before replacing the battery the data logger must be stopped.

Data stored on the logger will be retained after a battery is replaced.

A battery and 2 LEDs are supplied, but not fitted to the PCB.

The Reference line is an output from the logger that provides a 2.5V (100µA max) reference voltage for external application, if reauired.

The Sense Line is an output from the logger that changes state when a reading is taken.

This line goes from 0v to +3.5V, for approximately 50mS, whilst a reading is being taken (the line goes back to 0V when the reading cycle is complete).

The Sense Line has an impedance of 100KΩ.

The Reference and Sense Lines do not need to be connected for the data logger to record correctly

Using the Re-Educator software, which is supplied on the Tinytag Explorer CD, or can be downloaded free of charge from our web site (http://www.tinytag.info/downloads), the unit can be configured to display recorded data in the appropriate engineering units for the application it is being used in.

#### Calibration

This unit is configured to meet Gemini's quoted specification during its manufacture

We recommend that the calibration of this unit should be checked annually against a calibrated reference meter.

A certificate of calibration, traceable to a national standard, can be supplied for an additional charge either at the point of purchase, or if the unit is returned for a service calibration.

# Required and Related Products

To use this data logger you will require the following software:

SWCD-0040: Tinytag Explorer software

#### **Further Related Products**

CAB-0007: Tinytag PC Serial Download Cable

The SWCD-0040 software and CAB-0007-USB cable can be ordered together in a pack using the part number SWPK-7-USB.

www.tinytag.info

sales@tinytag.info

lata sheet